

How to rock the...

## Echo Centric

Thank you for buying the Echo Centric stereo echo with syncopation pedal!  
Below are some ideas to help you understand more about how the Echo Centric can become your powerful sonic tool.

### Basic Usage

In the normal mode, the Echo Centric creates echos of up to 1 second with control over the wet/dry mix, the delay time and the amount of feedback for creating repeating echos. In the syncopation mode extra, less-accented echos are added in between the main echos. The chosen delay time is divided into either quarters or thirds depending on the setting. OUT B produces the first quarter or third, and OUT A produces the second quarter or third. Choose the one you want or use in stereo for great effects.

Power can be from a 9V battery or a regulated adapter. If you hear hum with an adapter, it's not regulated or can't provide enough juice. Make sure the polarity is centre negative. Unplug your input cable when not using the effect. Power is used whenever the input is plugged in, even in bypass.

### Controls

**WET/DRY** - Adjusts the mix between the wet (echos) and dry signal.

**DELAY TIME** - Adjusts the delay time up to 1 second.

**FEEDBACK** - Sets the amount of echo feedback up to 100%.

**QUARTERS/THIRDS Switch** - Chooses the syncopation subdividing mode.

**SYNCOPATE Footswitch** - Turns on or off the syncopate mode.

**BYPASS Footswitch** - Turns on or bypasses the effect.

**ON LED** - Lit when the effect is on.

Questions or Problems? We want to help! Email [support@kilpatrickaudio.com](mailto:support@kilpatrickaudio.com) or visit our website: [www.kilpatrickaudio.com](http://www.kilpatrickaudio.com) for more information.

**Kilpatrick**  
AUDIO  
MADE IN CANADA

How to rock the...

## Echo Centric

Thank you for buying the Echo Centric stereo echo with syncopation pedal!  
Below are some ideas to help you understand more about how the Echo Centric can become your powerful sonic tool.

### Basic Usage

In the normal mode, the Echo Centric creates echos of up to 1 second with control over the wet/dry mix, the delay time and the amount of feedback for creating repeating echos. In the syncopation mode extra, less-accented echos are added in between the main echos. The chosen delay time is divided into either quarters or thirds depending on the setting. OUT B produces the first quarter or third, and OUT A produces the second quarter or third. Choose the one you want or use in stereo for great effects.

Power can be from a 9V battery or a regulated adapter. If you hear hum with an adapter, it's not regulated or can't provide enough juice. Make sure the polarity is centre negative. Unplug your input cable when not using the effect. Power is used whenever the input is plugged in, even in bypass.

### Controls

**WET/DRY** - Adjusts the mix between the wet (echos) and dry signal.

**DELAY TIME** - Adjusts the delay time up to 1 second.

**FEEDBACK** - Sets the amount of echo feedback up to 100%.

**QUARTERS/THIRDS Switch** - Chooses the syncopation subdividing mode.

**SYNCOPATE Footswitch** - Turns on or off the syncopate mode.

**BYPASS Footswitch** - Turns on or bypasses the effect.

**ON LED** - Lit when the effect is on.

Questions or Problems? We want to help! Email [support@kilpatrickaudio.com](mailto:support@kilpatrickaudio.com) or visit our website: [www.kilpatrickaudio.com](http://www.kilpatrickaudio.com) for more information.

**Kilpatrick**  
AUDIO  
MADE IN CANADA

How to rock the...

## Echo Centric

Thank you for buying the Echo Centric stereo echo with syncopation pedal!  
Below are some ideas to help you understand more about how the Echo Centric can become your powerful sonic tool.

### Basic Usage

In the normal mode, the Echo Centric creates echos of up to 1 second with control over the wet/dry mix, the delay time and the amount of feedback for creating repeating echos. In the syncopation mode extra, less-accented echos are added in between the main echos. The chosen delay time is divided into either quarters or thirds depending on the setting. OUT B produces the first quarter or third, and OUT A produces the second quarter or third. Choose the one you want or use in stereo for great effects.

Power can be from a 9V battery or a regulated adapter. If you hear hum with an adapter, it's not regulated or can't provide enough juice. Make sure the polarity is centre negative. Unplug your input cable when not using the effect. Power is used whenever the input is plugged in, even in bypass.

### Controls

**WET/DRY** - Adjusts the mix between the wet (echos) and dry signal.

**DELAY TIME** - Adjusts the delay time up to 1 second.

**FEEDBACK** - Sets the amount of echo feedback up to 100%.

**QUARTERS/THIRDS Switch** - Chooses the syncopation subdividing mode.

**SYNCOPATE Footswitch** - Turns on or off the syncopate mode.

**BYPASS Footswitch** - Turns on or bypasses the effect.

**ON LED** - Lit when the effect is on.

Questions or Problems? We want to help! Email [support@kilpatrickaudio.com](mailto:support@kilpatrickaudio.com) or visit our website: [www.kilpatrickaudio.com](http://www.kilpatrickaudio.com) for more information.

**Kilpatrick**  
AUDIO  
MADE IN CANADA

How to rock the...

## Echo Centric

Thank you for buying the Echo Centric stereo echo with syncopation pedal!  
Below are some ideas to help you understand more about how the Echo Centric can become your powerful sonic tool.

### Basic Usage

In the normal mode, the Echo Centric creates echos of up to 1 second with control over the wet/dry mix, the delay time and the amount of feedback for creating repeating echos. In the syncopation mode extra, less-accented echos are added in between the main echos. The chosen delay time is divided into either quarters or thirds depending on the setting. OUT B produces the first quarter or third, and OUT A produces the second quarter or third. Choose the one you want or use in stereo for great effects.

Power can be from a 9V battery or a regulated adapter. If you hear hum with an adapter, it's not regulated or can't provide enough juice. Make sure the polarity is centre negative. Unplug your input cable when not using the effect. Power is used whenever the input is plugged in, even in bypass.

### Controls

**WET/DRY** - Adjusts the mix between the wet (echos) and dry signal.

**DELAY TIME** - Adjusts the delay time up to 1 second.

**FEEDBACK** - Sets the amount of echo feedback up to 100%.

**QUARTERS/THIRDS Switch** - Chooses the syncopation subdividing mode.

**SYNCOPATE Footswitch** - Turns on or off the syncopate mode.

**BYPASS Footswitch** - Turns on or bypasses the effect.

**ON LED** - Lit when the effect is on.

Questions or Problems? We want to help! Email [support@kilpatrickaudio.com](mailto:support@kilpatrickaudio.com) or visit our website: [www.kilpatrickaudio.com](http://www.kilpatrickaudio.com) for more information.

**Kilpatrick**  
AUDIO  
MADE IN CANADA